




GEN2 Gridfinity Drawers for Lack Enclosures

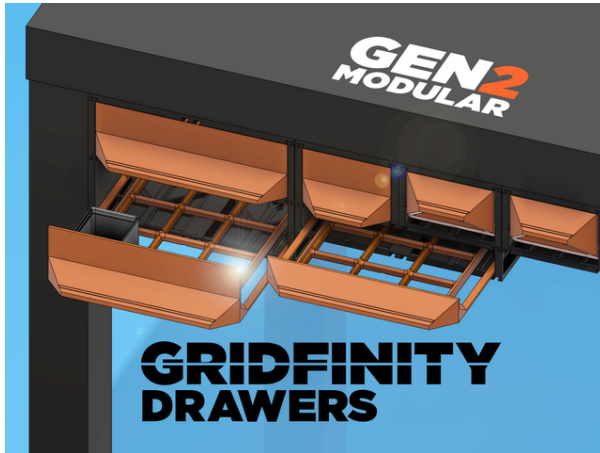

Jerrari

[VIEW IN BROWSER](#)

updated 25. 12. 2023 | published 25. 12. 2023

Summary

Gridfinity storage for your Lack enclosure adapted to the Gen2 modular storage system.



7.87 hrs



1 pcs



0.25 mm



0.40 mm



PET



93 g



Prusa
MK3/S/S+

[3D Printers](#) > [Other Printer Parts & Upgrades](#)

Tags: shelf box organizer ikea mk3 holder desk container small low mount modular magnet enclosure lack tray half magnetic bin cabinet slide rail bench portable caddy workbench wide double under insert stack chamber canister slim height gen2 interchangeable removable match gridfinity zackfreedman

Two modular storage systems combined!

GEN2 Modular Storage System is a modular rail system for mounting storage units under Lack enclosures and tables.

Gridfinity by **Zack Freedman** is an incredibly customizable storage solution that uses a grid like pattern for positioning customizable storage bins. [Official Video](#)



The **GEN2 Gridfinity Drawers** combine both these modular designs into one, allowing you to easily store your Gridfinity bins directly under your printer or workbench.

Originally designed for the **"Original Prusa i3 MK3 ENCLOSURE..."**, The Lack drawers have found their way on to many desks, workbenches, and other tables as well. Now with the Gen2's rail design you can quickly swap the storage units between

work areas

Download the **GEN2 Interactive Catalog PDF**

Features:

- Gen2 rails allowing quick and easier swap-ability and combinations of many Gen2 Storage System designs.
- Gridfinity Drawers also includes optional slots for magnets allowing them to snap into place with a nice "Click".
- Drawer stoppers keep your drawers from attacking your feet.
- Designed for larger and easier to install wood screws over the original lack enclosure drawer design.

HARDWARE


- Screwdriver
- Countersunk woodscrews: (Metric: **4x25mm to 4x16mm**) or (SAE: #6 or #8 up to 1" long)
- Drill bit that is smaller diameter than the wood screws
- Pen, Marker, or **Scratch Awl**
- Magnets (Optional): **10x5x2mm** or **10x2mm**
- M3 nuts
- M3 Screws M3x6 - M3x10

UPDATES

NEW - Tall Double Gridfinity Drawer

This drawer allows for up to 90mm of stacked Gridfinity units.
Reinforced structural support to handle more weight.

INSTRUCTIONS

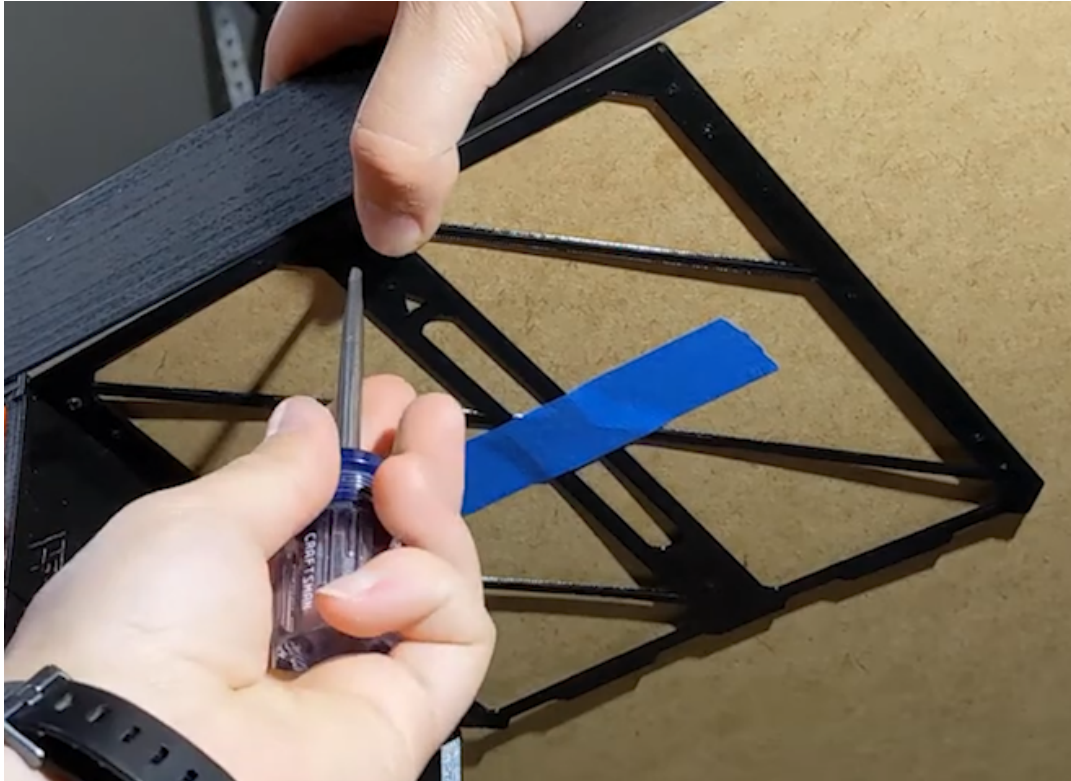

- Lets install the case for the drawers, use the template to mark the hole locations on the surface you are mounting the desired sized rail to.
- Drill out marked locations using a drill bit smaller than the diameter of the wood screw you will be using.



- Prep the rail for installation by installing M3 nuts into the hexagonal holes. You can use a M3 screw to position and tighten the nut in place.

- Install the rail using wood screws, use at least 4 screws on the outer corners to mount the single rail and 6 to mount the double rail. (extra screw holes are

available if you plan to stack more than 2 rows of drawers or contents of heavier than normal weight.)

- Prep the drawer case for installation:



Install optional magnets if desired

NOTE: you only need to install at least one magnet, you can choose to install 2 stacked if you want more magnetism between the case and the drawer. Pay attention to polarity, they can be corrected later if needed.



Install optional nuts in drawer case (these are only used if you are installing a shorter drawer beneath this drawer case).



Install optional drawer stops by pressing them into place as they are friction fit. Pay attention to the orientation, notch facing down and towards the front to pass through the slot. The one labeled “L” goes on the left side of the case and “R” on the right side. (While facing the front of the case)

- Slide the case into position until it either stops or lines up with the front of the rail. (If you feel any resistance you might need to clean up and plastic imperfections around the male or female rails.




- Slide a rail lock into the rail found on the backside of the drawer case, slide all the way to the top until it butts up against the hole in the rail that contains the nut. Screw in place using a M3x8 or M3x10.

- Prep the tray, install the optional magnet, pay attention to the polarity. (If you need to remove the magnet you can use another magnet to pull it out of place or use a small

Allen wrench or paper clip inserted into the hole below it.)

- Insert the tray by tilting in back when installing in order to pass by the drawer stopper notches. The tray should now slide into place.

Installing Drawers/Trays under each other

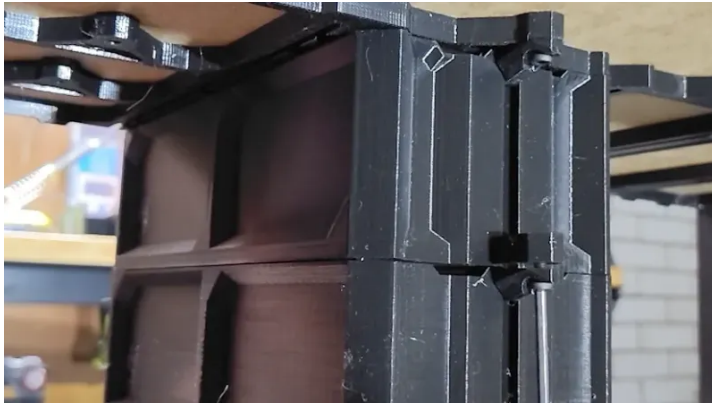

- This is the same process as above but instead of mounting the "Rail Lock" into the nut on the rail you will need to slide a "Rail Lock Upper" into place on the back of the case above or if installing a shorter drawer line up with the hole in the case above it. NOTE: You can only install the same length or smaller

drawer case under each drawer case.

A great how to video by [Howard](#)

RECOMMENDED PRINT SETTINGS

Filament: PLA (PETG or ABS for heavier duty storage)

Nozzle Size: 0.4mm

Print Height: 0.2-0.35mm

Infill: 10-20%

Gridfinity Bins created using [Gridfinity Template \(Fusion 360\)](#)



GEN2 COMPATIBLE PRINTS	
Gen2 Modular Lack Enclosure Drawers Download HERE	
Gen2 Parts Drawers Download HERE	
GEN2 Steel Sheet Holder V2 for Lack Enclosures Download HERE	
Gen2 Open Bin Lack Drawers Download HERE	
Gen2 Slim Lack Enclosure Drawers Download HERE	
GEN2 Filament Color Sample Tray Download HERE	
Gen2 Modular Tilt Drawers Download HERE	
Gen2 Large Modular Tilt Drawers Download HERE	

Gen2 Large Enclosure Bins

[Download HERE](#)



Model files



Test Print Files

1 file



gen2-test-print-parts.3mf

☐ Print to test fit functional parts



GEN2 Rails and Template

2 files



gen2-rail-double-template.3mf

☐ Drill template for installing GEN2 Rail - Double



gen2-rail-double.3mf

☐ Modular rail for attaching GEN2 units - 2 units wide




GEN2 Gridfinity Double Drawer

3 files



gen2-gridfinity-drawer-double.3mf

☐ 3x4 Gridfinity Grid | 40mm high bins max



gen2-double-drawer-case.3mf

☐ GEN2 Double Drawer Case



06mm-optimized-gen2-lack-case-double.3mf

☐ Optimized for 5hr print time using 0.6mm nozzle with Arachne



GEN2 Gridfinity Tall Double Drawer

2 files



gridfinity-double-tall-drawer-v10.3mf

☐ 3x4 Gridfinity Grid | 90mm high bins max



gen-2-lack-case-double-tall.3mf

☐ GEN2 Tall Double Drawer Case




GEN2 Gridfinity Slim Double Drawer

3 files




gen2-gridfinity-slim-drawer-double.3mf

☐ 3x4 Gridfinity Grid | 12mm high bins max



gen2-slim-drawer-case-double.3mf

☐ GEN2 Slim Drawer Case | half height of standard drawer




06mm-optimized-gen2-slim-drawer-case-double.3mf

☐ Optimized for 4.5hr print time using 0.6mm nozzle with Arachne




Hardware

3 files



drawer-stoppers.3mf

☐ (Optional) Drawer stoppers than can be added to an above drawer case



rail-lock-upper.3mf

☐ (Optional) Used only when adding a drawer underneath another



rail-lock-lower-v11.3mf

☐ Used to lock drawer case in place (Updated)



Gridfinity Bins - 40mm Height

8 files




1x1x40mm.3mf

☐ Fits GEN2 Gridfinity Double Drawer



2x2x40mm.3mf

☐ Fits GEN2 Gridfinity Double Drawer



4x1x40mm.3mf

☐ Fits GEN2 Gridfinity Double Drawer




2x1x40mm.3mf

☐ Fits GEN2 Gridfinity Double Drawer




4x2x40mm.3mf

☐ Fits GEN2 Gridfinity Double Drawer




3x1x40mm.3mf

☐ Fits GEN2 Gridfinity Double Drawer



3x2x40mm.3mf

☐ Fits GEN2 Gridfinity Double Drawer




3x3x40mm.3mf

☐ Fits GEN2 Gridfinity Double Drawer




Gridfinity Bins - 12mm Height

8 files



1x1x12mm.3mf

☐ Fits GEN2 Gridfinity Slim Double Drawer




2x1x12mm.3mf

☐ Fits GEN2 Gridfinity Slim Double Drawer



4x1x12mm.3mf

☐ Fits GEN2 Gridfinity Slim Double Drawer




3x1x12mm.3mf

☐ Fits GEN2 Gridfinity Slim Double Drawer



3x3x12mm.3mf

☐ Fits GEN2 Gridfinity Slim Double Drawer




3x2x12mm.3mf

☐ Fits GEN2 Gridfinity Slim Double Drawer



2x2x12mm.3mf


☐ Fits GEN2 Gridfinity Slim Double Drawer



4x2x12mm.3mf

☐ Fits GEN2 Gridfinity Slim Double Drawer

Print files



gridfinity-double-drawer_025mm_petg_mk3s_7h52m.gcode

 PET  0.40 mm  0.25 mm  7.87 hrs  93 g  Prusa MK3/S/S+

License

This work is licensed under a
[Creative Commons \(4.0 International License\)](#)



Attribution

- ✗ | Sharing without ATTRIBUTION
- ✓ | Remix Culture allowed
- ✓ | Commercial Use
- ✓ | Free Cultural Works
- ✓ | Meets Open Definition